



HEIDEN HC10096-54/HC10097-M54 FORK OPERATING MANUAL



HEIDEN LLC 4624 Expo Drive, Manitowoc, WI 54220 www.heidencrane.com . Phone: 888-682-5779 . Fax: 920-682-3174




Table of Contents

1.	Identification 3
	Model numbers I.D. plate
2.	General information5
	Prohibited methods of operation Attachment installation note Warranty
3.	Conditions of use7
	Operating conditions Operating the unit Transporting the unit
4.	Assembly instructions 11
	Parts breakdown
5.	Maintenance and repairs 15
	Maintenance information Maintenance intervals Repairs
6.	Troubleshooting 17



1. Identifying unit model number

1.1

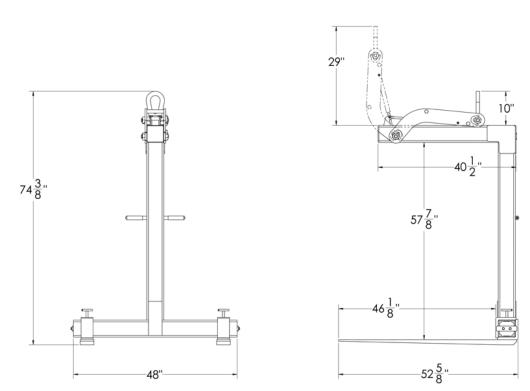

MODEL NUMBER


MODEL	CAPACITY LBS	AVAILABLE LOAD HEIGHT	STANDARD ADJUSTABLE FORK SPREAD
HC10097-54	6,000*	54"	14" TO 48"


includes weight of fork



1. Identifying unit model number

1.2

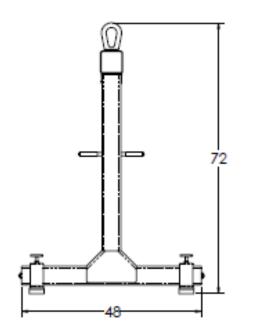

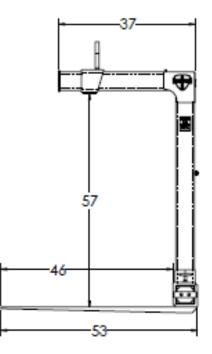


MODEL NUMBER

MODEL CAPACITY LBS		AVAILABLE LOAD	STANDARD ADJUSTABLE	
		HEIGHT	FORK SPREAD	
HC10096-M54	6,000*	54″	14" TO 48"	

*includes	
weight of fork	



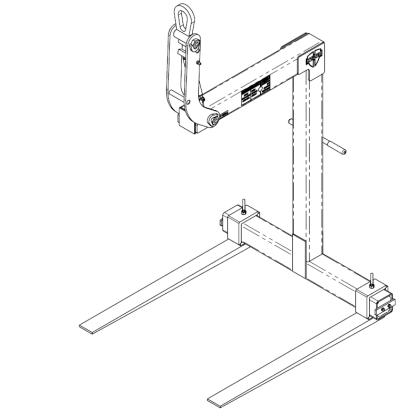


1. HC10097-54


1.1

2. HC10096-M54

2.1

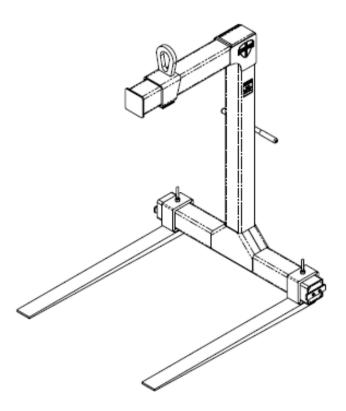



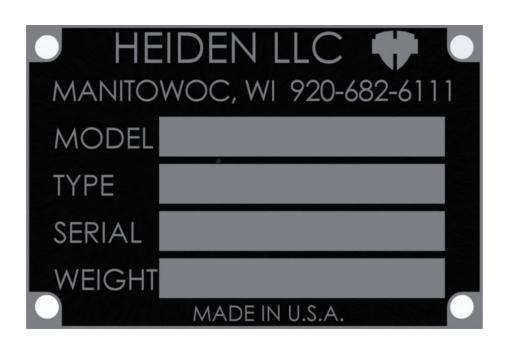

1.2 Identification Plate

Locate identification plate on upper rear of main frame to find model number and serial number needed when contacting for questions or replacement parts for your wallboard fork.



2. General information

These instructions apply to load bearing devices in lifting areas and affects products made by Heiden Inc. USA.

The statutory safety and accident prevention regulations apply to load bearing devices. Special mounting information, bearing capacities, permitted operating pressure and maintenance information along with lists are provided in this manual.

2.1 Prohibited methods of operation:

Warning!

Designates a possible dangerous situation.

Instructions must be observed and followed.

Disregarding this information may result in serious injury.

Disregarding the operating instructions may result in accidents, downtime and may void warranty.

- Equipment must be used in accordance with all regulations. See OSHA [Occupational Safety and Health Administration] 1926.1400(c)(17)(i)
- All equipment is generally designed for use near the ground (up to a lifting height of 6').
- It is prohibited to control the equipment by hand. (except when adjusting tine width)
- It is <u>prohibited</u> to conduct the equipment above people.
- It is prohibited to transport a person with any attachment!
- Using the crane fork without securing the load is generally prohibited.
- Observe the operating instructions!

General information:

Users must refer to the operating instructions to familiarize themselves with the machine before operating it.

The operating instructions are meant for the users. Please refer to the corresponding documents for descriptions and maintenance for other machine components and the base machine.



2.2 Installation note

- The machine may only be mounted by authorized personnel.
- Do not exceed the vehicle's total permitted weight when mounting the machine.
- The machine may only be fitted to suitable base machines.

2.3 Warranty

HEIDEN warrants each new product, made by **HEIDEN**, to be free from defects in materials and workmanship. Its obligation and liability under this warranty being expressly limited to repairing or, at **HEIDEN's** option, replacing free of charge at its factory any part proving defective under normal use and service for a period of 12 months from the day of delivery to the customer. Parts claimed to be, if defective and for which repair or replacement is desired, shall be, if requested by **HEIDEN**, returned transportation prepaid to **HEIDEN's** factory for inspection. **HEIDEN** will cover 60% of reasonable and agreed upon labor for the repair. *Note: electrical components are subject to 30 day warranty only.

Any operation beyond rated capacity or the improper use or application of the crane attachment or the substitution upon it of parts not approved by *HEIDEN* or any alteration or repair by others in such manner as, in *HEIDEN's* judgement, to the affect the product materially and adversely shall void this warranty. No representative of *HEIDEN* at any time shall change or extend this warranty in any way. This warranty covers only new and unused products by *HEIDEN*. Products manufactured by others are covered only by such warranties as are extended to *HEIDEN* by its suppliers.



2.3 Warranty Disclaimer

THIS WARRANY IS IN LIEU OF ALL OTHER WARRANTIES EXPRESS OR IMPLIED INCLUDING BUT NOT LIMITED TO WARRANTIES OF MERCHANTABILITY AND FITNESS FOR ANY PARTICULAR PURPOSE, AND THE OBLIGATION AND LIABILITY OF MANUFACTURER UNDER THIS WARRANTY SHALL NOT INCLUDE ANY TRANSPORTATION OR OTHER CHARGES OR ANY LIABILITY FOR DIRECT, INDIRECT OR CONSEQUENTIAL DAMAGES OR DELAY RESULTING FROM THE DEFECT.

3. Conditions of use

3.1 Operating conditions

The attachment is intended for use on truck mounted crane.

The attachment is designed for its intended purpose.

When a load is suspended in mid-air, it must be sufficiently secured (chain or trellis).

All other applications used with this attachment will be at the owner's full risk.

Please check with your dealer for special attachments for other uses.

The usual environmental conditions for construction machinery apply. Ambient temperature range: -15° C to 40° C.


Warning!



Using it any other way is not suitable.

Operating authority is liable for any danger or damages resulting in the misuse of this equipment.



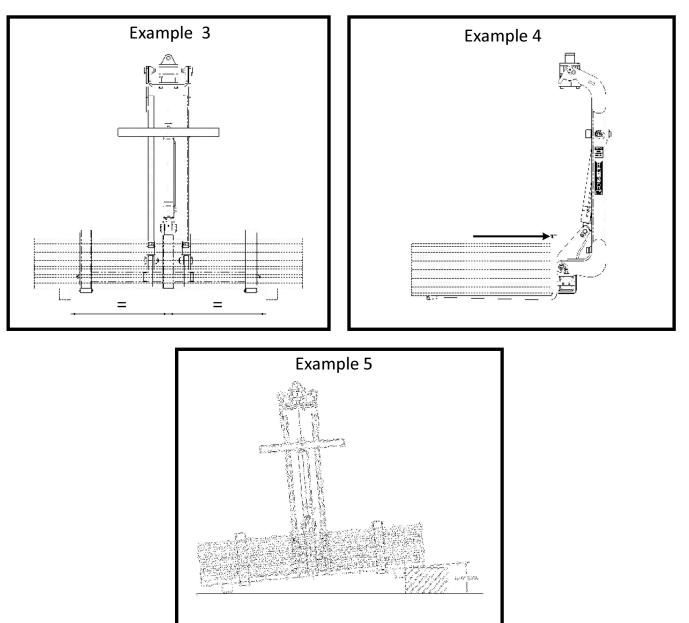

- C: There are two possibilities for unloading the fork (see example 3 & example 5):
 - 1. Open the pallet fork to a small extent so that it can be moved freely and pull the forks out. (see example 4)
 - 2. Open the wallboard fork to the horizontal position and remove the load.





Operating safety notes

All persons using the equipment should be familiar with the operation of the wallboard fork before commissioning the machine.



It is prohibited to wield the equipment by hand. Danger of injury!

The operator is legally obliged by government regulations for the prevention of accidents to have an expert inspect the equipment for fissures, wear, corrosion and functional safety at least once a year or more, depending on operating conditions.


Observe the permitted total weight when loading vehicles and trailers (vehicle documentation).

3.3 Transporting the unit

During transport the wallboard fork must be placed on the vehicle or trailer and secured in such a manner to minimize excessive movement.

4.3 Parts Breakdown




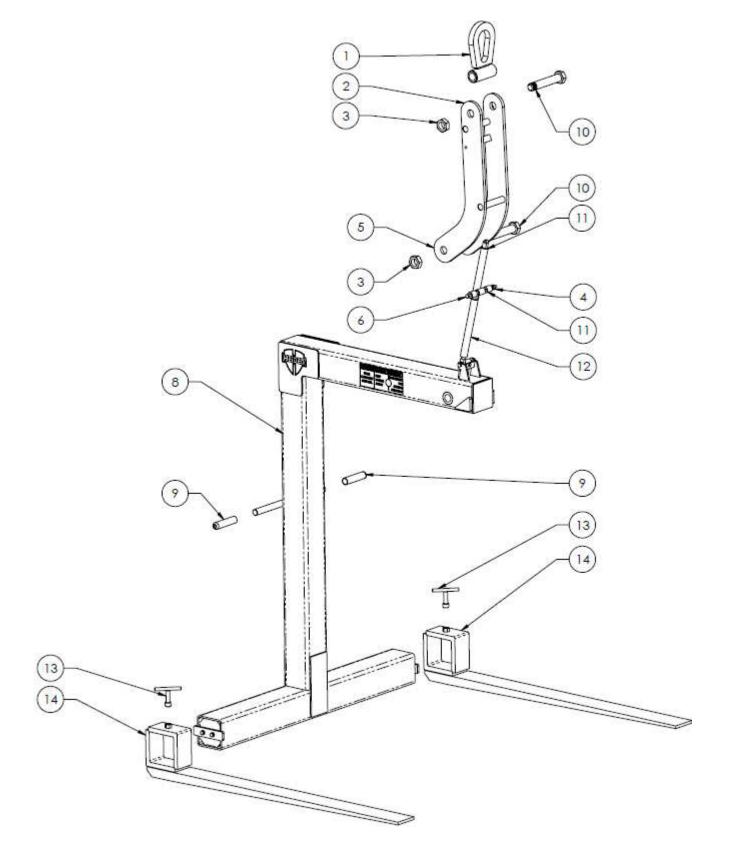

SERIAL NUMBER:_



4.3 Parts Breakdown

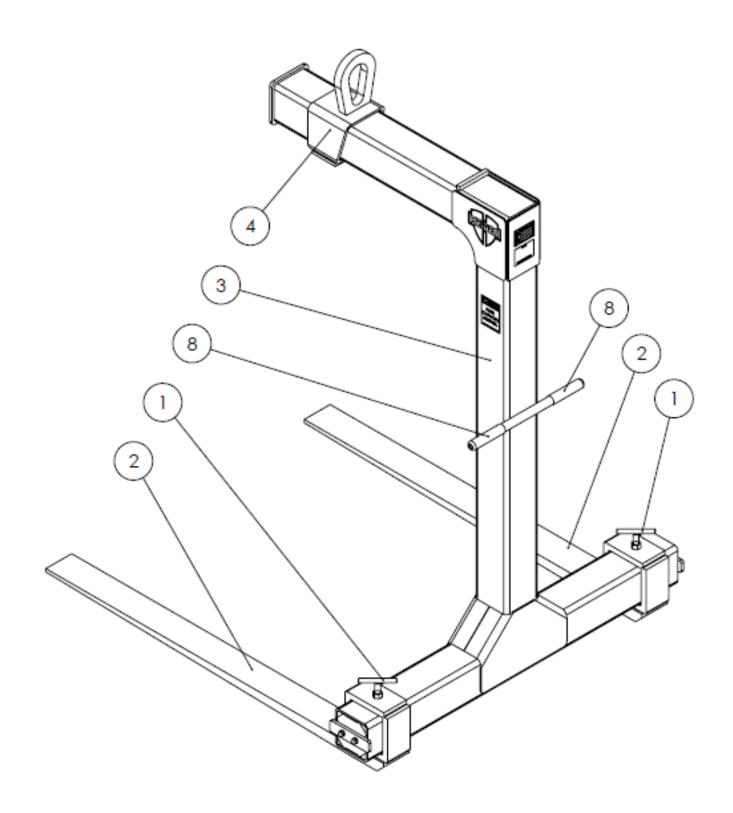



5. Maintenance and Repairs

5.1 General Notes

Thorough regular maintenance is essential for prolonged life of the pallet fork as well as limiting down time due to repairs.

Strict cleanliness must be observed in all maintenance operations including collection and proper disposal of fluids.


Clean grease zerks before greasing.

Maintenance intervals must be reduced if the equipment is being operated under severe conditions (e.g. on a building site with excessive dust)

5.2 Lubricants

Grease

Use Hi-temp Multi purpose grease: NLGI GC-LB ISO 220 #2 , see (fig. A) for zerk locations

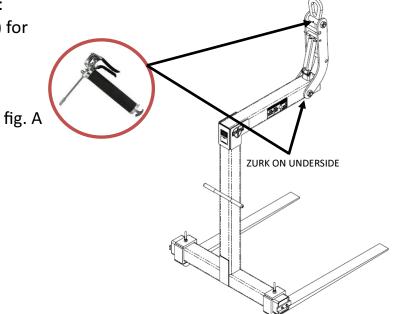



5.4 Maintenance Intervals

Maintenance Operation	Every 50 Operating Hours	Yearly
Clean and lubricate grease zerks	X	
Check screw connections, tighten if necessary	X	
Check for cracks, wear, corrosion and functional safety (to be carried out by qualified personnel)		Х

5.5 Repairs

If the equipment is found to be faulty, it must be repaired without delay or suitable measures must be taken to comply with all safety regulations.

Any welding on the unit is generally prohibited unless performed by a qualified individual and is performed per industry standards and do not compromise the integrity of the unit. Welding repairs may void warranty and is at the discretion of the Heiden LLC. It is advised to contact Heiden LLC before performing such repairs.



*Heiden LLC reserves the right to change these specifications without notice and without incurring any obligation relating to such changes. HWM-0002



Page intentionally left blank